

MOLLE



Our pouches are compatible with both standard 25 mm MOLLE (Grey webbing on the picture) and 20 mm Swedish Molle (Olive webbing on the picture).



Place the pouch in the position you want it. Push the attachment bands on the pouch through the MOLLE band on the carrier.



Push the attachment bands on the pouch under the first 25 mm band on the back of the pouch.



Push the attachment bands on the pouch through the next MOLLE band on the carrier.




Push the attachment bands on the pouch under the next 25 mm band on the back of the pouch.




Push the attachment bands on the pouch through the next MOLLE band on the carrier.



When you have reached the bottom of the pouch, make sure to go **UNDER** the blue band. On this pouch, we also went under the grey band. **But you MUST ALWAYS go under the blue band.**

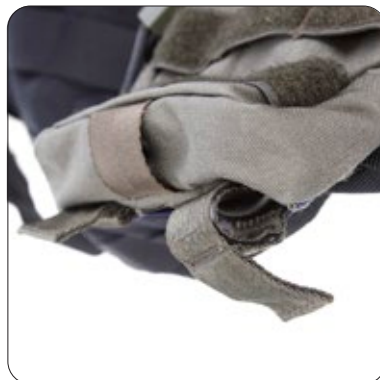

Fold the attachment band and go into the tunnel on the pouch

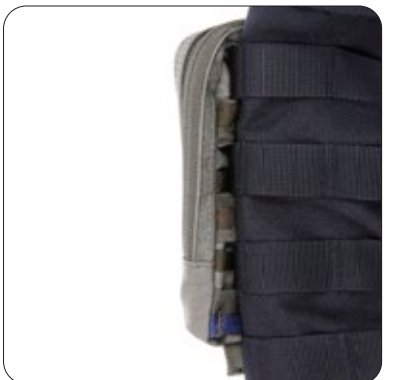

This is what it should look like when it is ready. Pull the pouch to make sure it is securely attached.

Swedish "Molle"



Our pouches are compatible with both standard 25 mm MOLLE (Grey webbing on the picture) and 20 mm Swedish Molle (Olive webbing on the picture).



Place the pouch in the position you want it. Push the attachment bands on the pouch through the MOLLE band on the carrier.



Push the attachment bands on the pouch under the first 10 mm band (olive in this pouch) on the back of the pouch.



Push the attachment bands on the pouch through the next MOLLE band on the carrier. Then push the attachment bands on the pouch under the next 10 mm band on the back of the pouch.




Push the attachment bands on the pouch through the next MOLLE band on the carrier. Then push the attachment bands on the pouch under the next 10 mm band on the back of the pouch.



When you have reached the bottom of the pouch, make sure to go **UNDER** the blue band.

You MUST ALWAYS go under the blue band.

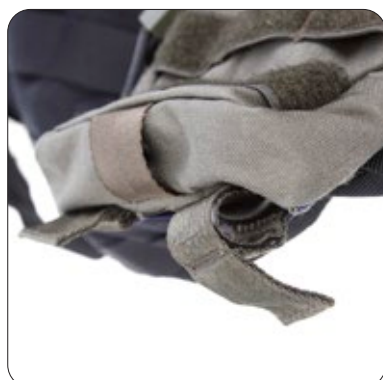

Fold the attachment band and go into the tunnel on the pouch.



Both attachment bands are under the blue band and secured inside the tunnel.



This is what it should look like when it is ready. Pull the pouch to make sure it is securely attached.